



# Sun Fire™ V1280/Netra™ 1280 Systems Getting Started

---

## Accessing the Sun Fire™ V1280/Netra™ 1280 Documentation Files

The full documentation set for Sun Fire V1280/Netra 1280 systems is available on the documentation CD (doc CD).

### 1. Insert the doc CD into a CD-ROM or DVD-ROM drive

- If you are accessing the doc CD from a Power Macintosh, PC, or if your system is running Volume Manager, the CD-ROM will mount automatically.
- If your system is not running Volume Manager, become superuser and mount the CD-ROM manually by typing:

```
# mkdir -p /cdrom/cdrom0  
# mount -o ro -F hsfs /dev/dsk/c0t6d0s2 /cdrom/cdrom0
```

The above command applies to workstations with SCSI drives. If your workstation has an IDE drive, the device is `/dev/dsk/c0t2d0s2`.

### 2. Open the `cdrom0` directory to access the PDF files with Adobe® Acrobat Reader. If you do not have Adobe Acrobat Reader installed, you can download it at no cost, at:

<http://www.adobe.com/products/acrobat/readstep.html>

---

# List of Sun Fire Sun Fire V1280/Netra 1280 Systems Documentation



## System Planning and Site Preparation

### Sun Fire V1280/Netra 1280 Systems Pre-Sales

- *Sun Fire V1280/Netra 1280 Systems Site Planning Guide*



## System Installation

### Sun Fire V1280/Netra 1280 Systems Kit

- *Sun Fire V1280/Netra 1280 Systems Unpacking Guide*
- *Sun Fire V1280/Netra 1280 Systems Getting Started*
- *Sun Fire V1280/Netra 1280 Systems Installation Guide*

### Sun Fire V1280/Netra 1280 Systems Doc CD

- *Sun Fire V1280/Netra 1280 System Administration Guide*
- *Sun Fire V1280/Netra 1280 System Controller Command Reference Manual*



## Administration

### Sun Fire V1280/Netra 1280 Systems Doc CD

- *Sun Fire V1280/Netra 1280 Systems Software Release Notes*
- *Sun Fire V1280/Netra 1280 System Administration Guide*
- *Sun Fire V1280/Netra 1280 System Controller Command Reference Manual*

### Other Sun Fire V1280/Netra 1280 Systems Docs

- *Sun Management Center User's Guide*
- *Solaris System Administration Guide*



## Repair and Troubleshooting

### Sun Fire V1280/Netra 1280 Systems Doc CD

- *Sun Fire V1280/Netra 1280 Systems Service Manual*
- *Sun Fire V1280/Netra 1280 System Administration Guide*

### Other Sun Fire V1280/Netra 1280 Systems Docs

- *Sun Management Center User's Guide*
- *Solaris System Administration Guide*



## Globalization

### Sun Fire V1280/Netra 1280 Systems Doc CD

- French, German, Italian, Spanish, Swedish, Japanese, Korean, Simplified Chinese, and Traditional Chinese

# Installation Task Map for Sun Fire V1280/Netra 1280 Systems Pre-Mounted in a Sun Rack



- 
- Step 1**
- Verify power, air conditioning, and floor area requirements — Refer to the *Sun Fire V1280/Netra 1280 Systems Site Planning Guide*.
- 
- Step 2**
- Set up the Sun Rack and connect the power cables — Refer to the *Sun Rack Installation Guide*.
- 
- Step 3**
- Connect an administrative console to access the system controller — Refer to the *Sun Fire V1280/Netra 1280 Systems Installation Guide*.
- 
- Step 4**
- Power on the Sun Rack — Refer to the *Sun Rack Installation Guide*.
  - Power on the individual systems — Refer to the *Sun Fire V1280/Netra 1280 Systems Installation Guide*.
- 
- Step 5**
- Allow the system to run through POST and ensure there are no errors, then power off the systems and the Sun Rack.
- 
- Step 6**
- Power off the system — Refer to the *Sun Fire V1280/Netra 1280 Systems Installation Guide*
  - Power off the cabinet — Refer to the documentation that came with the cabinet.
- 
- Step 7**
- Install options and storage devices — Refer to the documentation that came with the option or storage device for details.
- 
- Step 8**
- Power on the Sun Rack — Refer to the *Sun Rack Installation Guide*.
  - Power on the individual systems — Refer to the *Sun Fire V1280/Netra 1280 Systems Installation Guide*.
- 
- Step 9**
- Configure the system — Refer to the *Sun Fire V1280/Netra 1280 System Administration Guide*.
  - Create additional domains (if needed) — Refer to the *Sun Fire V1280/Netra 1280 Systems Platform Administration Manual*.
- 
- Step 10**
- Install the Solaris software on each domain — Refer to the *Solaris Installation Guide*.
  - Boot the Solaris software on each domain — Refer to the *Sun Fire V1280/Netra 1280 System Administration Guide*.

# Installation Task Map for Rackmounting Sun Fire V1280/Netra 1280 Systems



- 
- Step 1**
- Verify power, air conditioning, and floor area requirements — Refer to the *Sun Fire V1280/Netra 1280 Systems Site Planning Guide*.
- 
- Step 2**
- Set up the cabinet and connect the power cables — Refer to the documentation that came with the cabinet.
- 
- Step 3**
- Mount the system into the cabinet and connect power cables — Refer to the *Sun Fire V1280/Netra 1280 Systems Installation Guide*.
- 
- Step 4**
- Connect an administrative console to access the system controller — Refer to the *Sun Fire V1280/Netra 1280 Systems Installation Guide*.
- 
- Step 5**
- Power on the cabinet — Refer to the documentation that came with the cabinet.
  - Power on the individual systems — Refer to the *Sun Fire V1280/Netra 1280 Systems Installation Guide*.
- 
- Step 6**
- Allow the system to run through POST and make sure there are no errors.
- 
- Step 7**
- Power off the system — Refer to the *Sun Fire V1280/Netra 1280 Systems Installation Guide*
  - Power off the cabinet — Refer to the documentation that came with the cabinet.
- 
- Step 8**
- Install options and storage devices— Refer to the documentation that came with the option or storage devices for details.
- 
- Step 9**
- Power on the cabinet — Refer to the documentation that came with the cabinet.
  - Power on the system — Refer to the *Sun Fire V1280/Netra 1280 Systems Installation Guide*.
- 
- Step 10**
- Configure the system — Refer to the *Sun Fire V1280/Netra 1280 Systems Platform Administration Manual*.
  - Create additional domains (if needed) — Refer to the *Sun Fire V1280/Netra 1280 System Administration Guide*.
- 
- Step 11**
- Install the Solaris software on each domain — Refer to the *Solaris Installation Guide*.
  - Boot the Solaris software on each domain — Refer to the *Sun Fire V1280/Netra 1280 System Administration Guide*.

---

## **Accessing Sun Documentation**

You can view, print, and purchase a broad selection of Sun documentation, including localized versions, at:

<http://www.sun.com/documentation>

## **Contacting Sun Technical Support**

If you have technical questions about this product that are not answered in this document, go to:

<http://www.sun.com/service/contacting>

## **Sun Welcomes Your Comments**

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can email your comments to Sun at:

[docfeedback@sun.com](mailto:docfeedback@sun.com)

Please include the part number (817-0507-11) of the document in the subject line of your email.

Copyright 2003 Sun Microsystems, Inc. All rights reserved. Use is subject to license terms. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers. Portions may be derived from Berkeley BSD systems, licensed from U. of CA. Sun, Sun Microsystems, the Sun logo, Sun Fire, Netra, and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and in other countries. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and in other countries. U.S. Government Rights—Commercial use. Government users are subject to the Sun Microsystems, Inc. standard license agreement and applicable provisions of the FAR and its supplements.

Copyright 2003 Sun Microsystems, Inc. Tous droits réservés. Distribué par des licences qui en restreignent l'utilisation. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun. Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. Sun, Sun Microsystems, le logo Sun, Sun Fire, Netra, et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays. Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays.



Sun Microsystems, Inc.  
[www.sun.com](http://www.sun.com)